

Mindsweep Phaser Pedal

A classic 2 or 4 stage analog phaser pedal. This pedal gives you a range of 1970's-style phase-shifting tones from subtle and sweet to groovy and psychedelic. And it adds great harmonic overtones that provides the color that so many guitarists seek out.



Controls

Speed - control to adjust the speed of the sweep.

4/2 Stage - switch to change between a 4-stage or 2-stage phaser.

Mode - switch to make the effect more (L) or less (R) pronounced.

Bias - internal trim-pot control to adjust the circuit bias.*

** The bias is set during the initial testing of the pedal, however it may require some adjustment to taste.*

Features

- True-bypass
- 1/4" input jack
- 1/4" output jack
- 9V DC jack, negative tip (10mA current draw)
- Internal 9V battery holder**

Made in the USA

www.sonictoneamps.com

** - 9V battery not included